MIDMARK®

Dressing Nook and 34" Integrated Panel With Welch Allyn Diagnostic System

Installation Instructions

Unpacking Notes

- **Concealed Damage.** If there should be damage of such nature that it could not be detected until the goods were unpacked, have the Transportation Company's Agent come AT ONCE and inspect them. Require them to give you a "concealed" bad order report stating the condition of the goods when examined. It is their duty to do this and you should INSIST upon it.

- **If the Above Instructions are Complied With**, we shall cheerfully render all possible assistance in establishing claims against the Transportation Company for loss and damage in transit.

- **We Do Not Accept Goods Returned For Credit, Exchange, Repairs**, or for any other reason, unless you have first communicated with us and secured our written permission.

Installation

NOTE
The Dressing Nook and Integrated Panel are mounted to the wall using steel mounting brackets (provided with units). Wall anchors and drywall screws are also provided to secure the mounting brackets to the wall. Figures 1 thru 5 are suggested mounting configurations and locations only.

1. Using the customer or room layout drawing, determine where the Dressing Nook and / or Integrated Panel are to be located. See Figure 1 for the suggested room layout.

2. Check clearance required for placing a side chair beside the Dressing Nook. A minimum of 24 in. (61 cm) is required for the Midmark 429 or Ritter 129 Side Chair. See Figure 2.

NOTE
If the locations of the units differ from what is shown in Figure 2, then bracket locations shown in Figure 3 must be changed accordingly.

3. Measure and mark the mounting locations of the mounting brackets on the wall. See Figure 3.

4. Locate and mark the location of studs in reference to mounting bracket; an electronic stud finder may be useful.

NOTE
This note applies to steps 5 thru 7. When securing mounting brackets to a wall with metal studs, use sheet metal screws in place of drywall screws and when securing mounting brackets to a masonry / concrete block wall, use masonry screws in place of drywall screws and wall anchors.

5. Place the mounting bracket in position on wall and mark the locations of all fasteners. Remove the mounting bracket and drill a 3/8 in. hole where all wall anchors are to be used; four holes per mounting bracket if a wall stud is not located and three holes per mounting bracket if a wall stud is located.

6. Install a wall anchor in each hole. Install a screw in each wall anchor and tighten far enough to secure the wall anchor in place. Then, remove all screws from the wall anchors.

EQUIPMENT ALERT
The 61-7/16 in. (156 cm) minimum dimension between the Dressing Nook mounting brackets is critical for installation.

7. Attach mounting brackets to the wall using wall anchor screws. Level each mounting bracket before securing to the wall.

8. Test each mounting bracket for strength.

9. Mount the instruments to the Integrated Panel as follows using Figure 4 or 5 to properly position the instruments:
Position the Aneroid Blood Pressure Unit on the single screw provided and then secure top of unit in place using two additional screws provided. Install (hang) the remaining instrument assemblies on the pre-installed mounting screws.

10. Lift the Dressing Nook and / or Integrated Panel onto their mounting brackets.

© Midmark Corporation - 1997

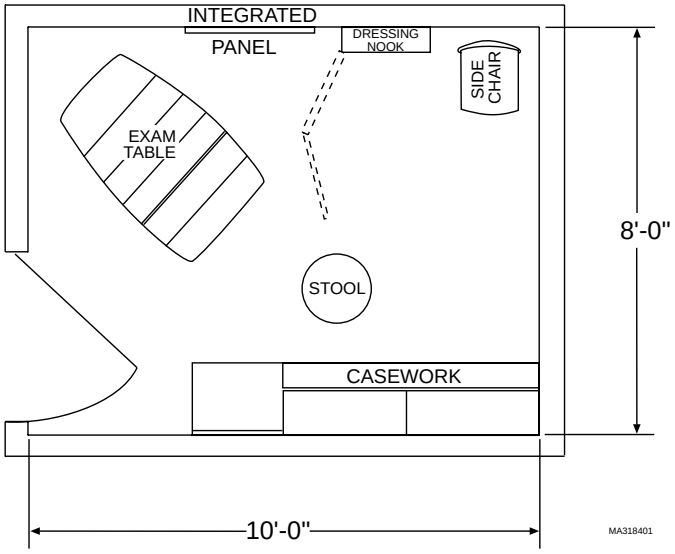

FIGURE 1. SUGGESTED ROOM LAYOUT

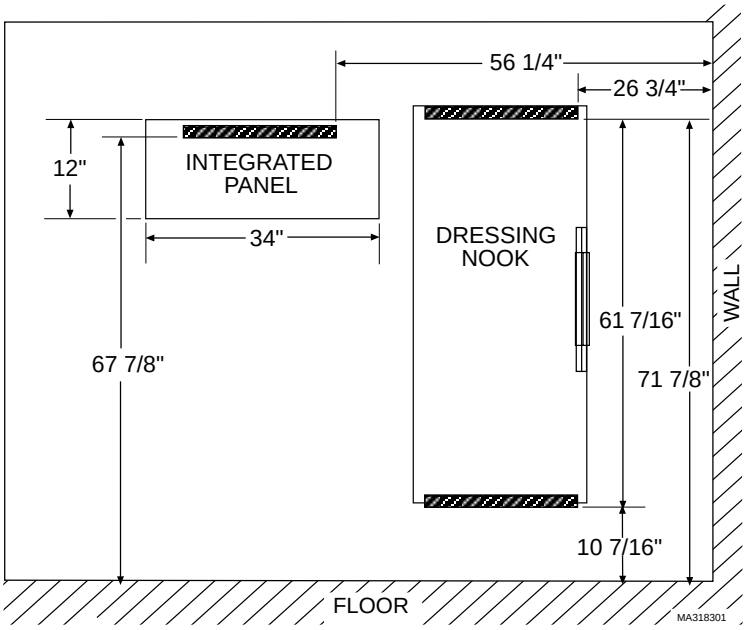

FIGURE 3. MOUNTING BRACKET POSITIONING ON WALL

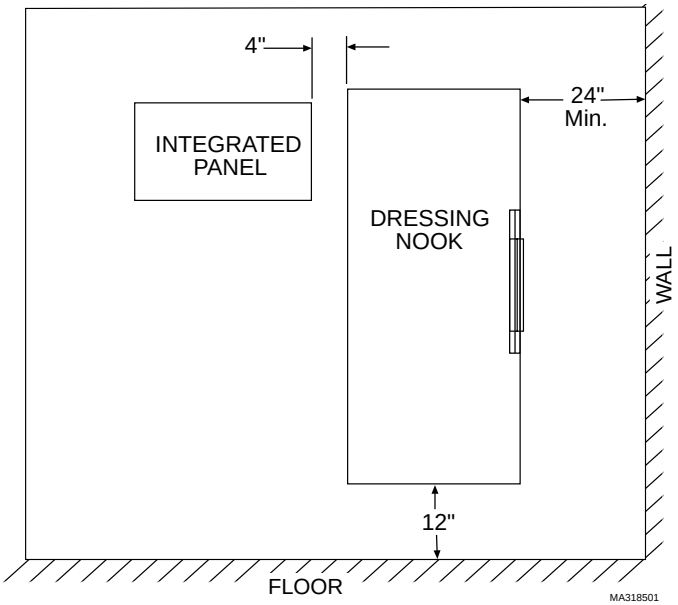

FIGURE 2. DRESSING NOOK / INTEGRATED PANEL POSITIONING ON WALL

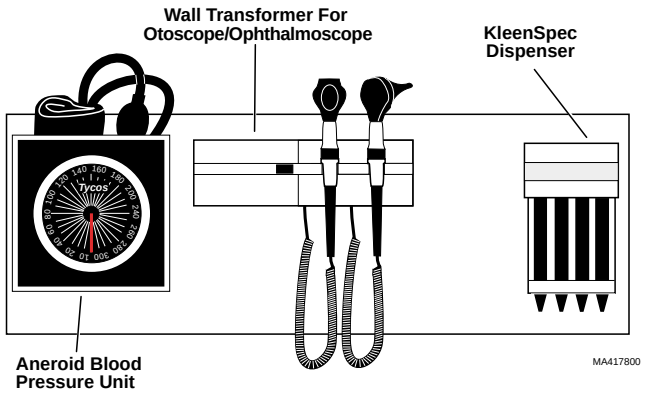

FIGURE 4. INSTRUMENT LOCATION FOR A 76792 INTEGRATED PANEL

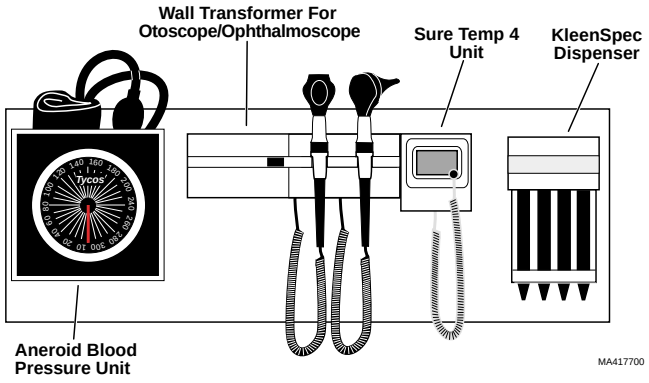

FIGURE 5. INSTRUMENT LOCATION FOR A 76791 INTEGRATED PANEL

For questions or information regarding the medical instruments on the Integrated Panel, contact Welch Allyn, Inc. at 4341 State Street Road, Skaneateles Falls, NY 13153. [Tel: 315-685-4560]

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation - 1997